
RGBW LED Mini RF Controller

Model No.: V4-W

4 channel constant voltage/Max 75W/Step-less dimming/Wireless remote control

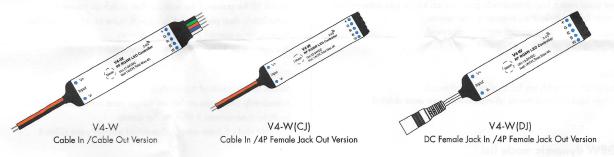

CE ROHS emc RED

Model List

Model	Photo	Power Connector	LED Connector
V4-W	1904 V-VAW 2,60 0 0 PR ROW LED Controller R	Red/Black Cable 1 Ocm	5-color Flat Cable 10cm
V4-W(CJ)	Input (Mapp) VA-W 2,6% + + + + + + + + + + + + + + + + + +	Red/Black Cable 10cm	5-pin Flat Female Jack
V4-W(DJ)	Input V4-W 2.6% G G G R R R R R R R R R R R R R R R R	5.5mm DC Female Jack	5-pin Flat Female Jack

Features

- 4 channel constant voltage RGBW LED mini RF controller.
- 1A per channel, output connect with 5 meters RGBW LED strip, max output power 75W.
- \bullet Match with RF 2.4G single zone or multiple zone RGB/RGBW remote control.
- One RF controller accept up to 10 remote control.
- 4096 levels 0-100% dimming smoothly without any flash.
- Built in 10 dynamic mode, includé jump or gradual change style.
- Auto-transmitting function: Controller automatically transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.

Technical Parameters

Input and Output		Dimming data	Dimming data		Safety and EMC	
Input voltage	12-24VDC	Input signal	RF 2.4GHz	FAIC . L. LIEMEN	ETSI EN 301 489-1 V2.2.3	
Output voltage	12-24VDC	Control distance	30m(Barrier-free space)	EMC standard (EMC)	ETSI EN 301 489-17 V3.2.4	
Output power	Max. 75W	Dimming gray scale	4096 (2^12) levels	Safety standard	EN 62368-1:2020+A11:2020	
Output type	Constant voltage	Dimming range	0-100%	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	
Environment		Dimming curve	Logarithmic	Certification	CE,EMC,RED	
Operation temperature Ta: -30 °C ~ +55 °C		PWM Frequency	500Hz (default)	Package		
Case temperature (Max.)	Ta: +85°C	Warranty	5 years	Size	L90x H130mm	
				Gross weight	0.038kg	

Power Supply 12-24VDC Constant Voltage AC100-240V RGBW remote AC100-240V

User Manual Ver 2.0.1

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the remote.

The light blinks 3 times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

RGBW dynamic mode list

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Yellow cyan purple smooth	10	White fade in and out

Use Power Restart

Match:

Switch off the power of the receiver, then switch on power.

Immediately short press on/off key (single zone remote) or zone key
(multiple zone remote) 3 times on the remote.

The light blinks 3 times means match is successful.


Delete:

Switch off the power of the receiver, then switch on power.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.

Dimming Curve

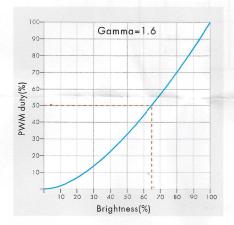

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting	
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.	
Wrong color	1. Wrong connection of R/G/B/W wires.	1. Reconnect R/G/B/W wires.	
No response from the remote	The battery has no power. Beyond controllable distance. The controller did not match the remote.	Replace battery. Reduce remote distance. Rematch the remote.	

Installation Precautions

- 1. The products shall not be stacked, the distance should be ≥ 20cm, so as not to affect lifespan of the products due to poor heat dissipation.
- 2. The product shall not be installed close to the switching power supply with an interval of \geq 20cm to avoid the radiation interference of the switching power supply.
- 3. The installation height shall be ≥ 1 m from the floor to avoid shortening the remote control distance due to too weak reception signal.
- The products are not allowed to be close to or covered by metal objects, with an interval of ≥ 20cm to avoid signal attenuation and shorten the remote control distance.
- 5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of ≥ 20cm to avoid signal interference.