

# CE ROHS emc RED

3 channel constant voltage / Max 6A output / Step-less dimming / Wireless remote control

# Model List

Model	Photo	Power Connector	LED Connector
V3-M	VIM RESULT Control > Ke <sup>R</sup> VIM RESULT Control > Ke <sup>R</sup> VIM RESULT Control > Ke <sup>R</sup> VIM RESULT Control = Ke <sup>R</sup>	Red/Black Cable 10cm	4-color Flat Cable 10cm
V3-M(CJ)	VIM ROLEC Consider Jack BU- IN-ISTOC BU- BU- BU- BU- Constant CCC DE TO The Regeneration Roles The Regeneration Roles	Red/Black Cable 10cm	4-pin Flat Female Jack 10cm
V3-M(DJ)	VIAI 65 10 Constant 24 <sup>th</sup> Statistics Constant 24 <sup>th</sup> St	5.5mm DC Female Jack	4-pin Flat Female Jack 10cn
			t on/off lade time

#### Features

- 3 channel constant voltage RGB LED mini RF controller.
- 2A per channel, output connect with 5 meters RGB LED strip.
- Match with RF 2.4G single zone or multiple zone RGB/RGBW remote control.
- One RF controller accept up to 10 remote control.
- 4096 levels 0-100% dimming smoothly without any flash.
- Built in 10 dynamic mode, include jump or gradual change style.

• Light on/off fade time 3s selectable.

• Auto-transmitting function: Controller automatically transmit signal to another controller with 30m control distance.

• Synchronize on multiple number of controllers.

### **Technical Parameters**

Input and Output	No.	Dimming data		Safety and EMC	
Input voltage	12-24VDC	Input signal	RF 2.4GHz		ETSI EN 301 489-1 V2.2.3
Output voltage	12-24VDC	Control distance	30m(Barrier-free space)	EMC standard (EMC)	ETSI EN 301 489-17 V3.2.4
Output current	2A/CH, Total Max. 6A	Dimming gray scale	4096 (2^12) levels	Safety standard	EN 62368-1:2020+A11:2020
Output type	Constant voltage	Dimming range	0-100%	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Environment	1.0 A	Dimming curve	Logarithmic	Certification	CE,EMC,RED
Operation temperature	Ta: -30 °C ~ +55 °C	PWM frequency	2000Hz (default)	Package	
Case temperature (Max.)	Tc: +85°C	Warranty		Size	L90x H130mm
IP rating	IP20	Warranty	5 years	Gross weight	0.021kg

# Dimension





### Match Remote Control

End user can choose the suitable match/delete ways. Three options are offered for selection:

Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the remote. The LED indicator fast flash a few times means match is successful.

#### Delete:

Press and hold match key for 5s to delete all match, the LED indicator fast flash a few times means all matched remotes were deleted.

### Use Power Restart

#### Match:

Switch off the power of the receiver, then switch on power. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power of the receiver, then switch on power. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

#### Another way to match:

The receiver is power on for five consecutive times, the LED strip light start blinking slowly for 10s, Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) on the remote. The light blinks 3 times means match is successful.

# Light on/off fade time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

### RGB Dynamic mode list



### **Dimming curve**



# Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting           1. Check the power.           2. Check the connection.	
No light	<ol> <li>No power.</li> <li>Wrong connection or insecure.</li> </ol>		
Wrong color	1. Wrong connection of R/G/B wires.	1. Reconnect R/G/B wires.	
No response from the remote	<ol> <li>The battery has no power.</li> <li>Beyond controllable distance.</li> <li>The controller did not match the remote.</li> </ol>	<ol> <li>Replace battery.</li> <li>Reduce remote distance.</li> <li>Re-match the remote.</li> </ol>	

# Installation Precautions

1. The products shall not be stacked, the distance should be ≥ 20cm, so as not to affect lifespan of the products due to poor heat dissipation.

- 2. The product shall not be installed close to the switching power supply with an interval of  $\geq$  20cm to avoid radiation interference of the switching power supply. 3. The installation height shall be  $\geq$  1 m from the floor to avoid shortening the remote control distance due to too weak reception signal.
- 4. The products are not allowed to be close to or covered by metal objects, with an interval of  $\ge$  20cm to avoid signal attenuation and shorten the remote distance. 5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of  $\ge$  20cm to avoid signal interference.