




230V LED ROPE LIGHT – INSTALLATION INSTRUCTIONS

LED-RL236MXX LED-RL496RGB

The wires in the rope light are directional and must be connected the correct way around. Although the holes in the rope light are offset from the middle, the connector pins may not be, so if the rope light is not working, simply reverse the pins. If many lengths of rope light are being connected together, it is easier to test each length is working before proceeding with the next.

Cutting the 2-Wire Rope Light

Cut the rope light to the desired length. Cut only at the marked locations (every 2m), using a pair of scissors or carton knife. Be sure the cut is clean and vertical. Bend the rope light to the left approximately two inches from the end and trim off any excess wire that might protrude. Bend the rope light to the right approximately two inches from the end and again trim off any excess wire that might protrude with side cutters.

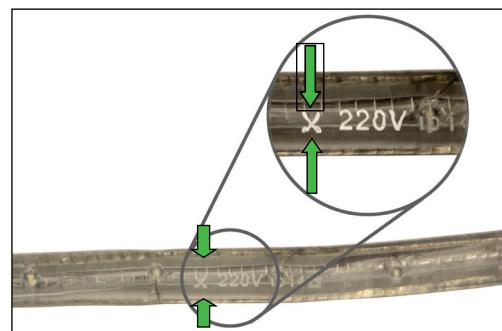

Cutting the 4-Wire RGB Rope Light


This rope can only be cut every 2 meters - Cut only at the marked locations, using a pair of scissors or carton knife. Be sure the cut is clean and vertical. Clean the cut of excess wire as above. If the either of the types of rope are cut away from the cut mark, then both pieces of that section either side of the cut will no longer work. This is because the circuit for that section is now broken. This is especially critical for the 4-wire RGB as a single section is 6m long.

Apply End Caps

End caps are required at the exposed end of the rope light for both waterproofing and for safety.

Caution: Never install accessories with the rope lights plugged into the power.

Put clear silicone into the end cap then push it firmly onto the end of the rope light not attached to the power cord. Squeeze out and wipe away any excess silicone that emerges from around the edge of the cap. The silicone will prevent the end cap from falling off and also create a water-tight seal.

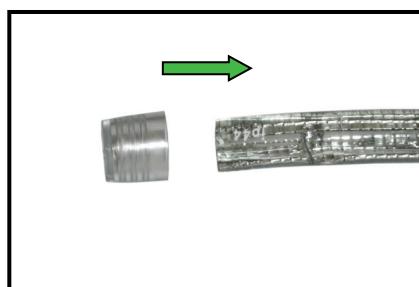

Attach Power Cords



Power cords connect the rope light to a standard wall outlet. You must use the power cord supplied as it has a rectifier built in, which is an electrical device that converts alternating current (AC), which periodically reverses direction, to direct current (DC), which flows in only one direction. Installation of the rope light without the rectifier in place will cause permanent damage to the rope light.

1. Waterproof Power Cords

Caution: Never install accessories with the rope lights plugged into the power.

Push the sharp ends of the off-centre pin connectors into the wires on the exposed end of rope light until it stops. It's very important to push the pins in as level as possible to pierce down the wire length in order to make a good contact – check the pins are not angling off away from the wires inside the rope.

Then slide the rope with the pins into the sleeve of the power cable socket, lining up the blunt connector pins with the pin sockets inside the power cable socket. Push firmly into place until it is in as far as it can go. For waterproofing, see the 'waterproofing connections' section below.

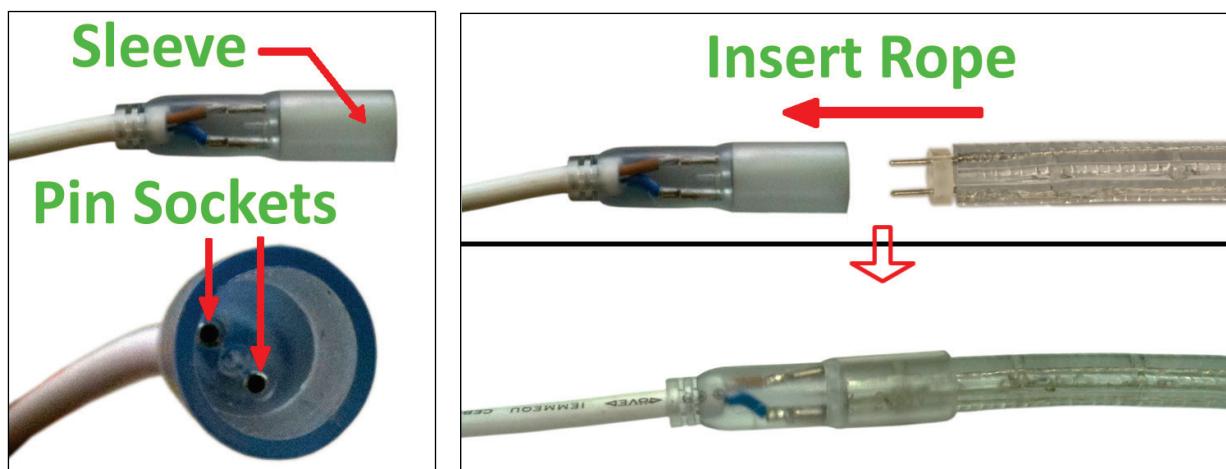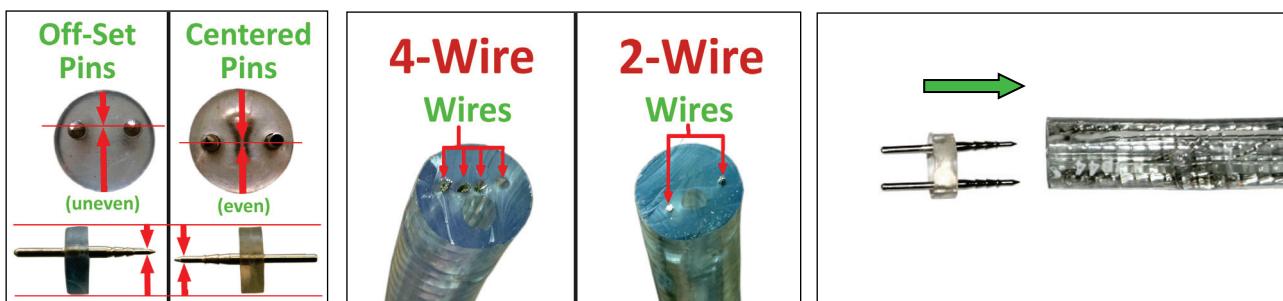


Important: For wet locations, seal the connection with silicone sealant and cover with glue lined heat shrink tubing (see 'waterproofing connections').

2. Non-Waterproof Power Cords

Caution: Never install accessories with the rope lights plugged into the power.

Remove the threaded jacket from the connector on the power cord and slide it onto the rope light being connected. Push the power connector prongs into the wires on the exposed end of rope light until it stops. It's very important to push the pins in as level as possible to pierce down the wire length in order to make a good contact – check the pins are not angling off away from the wires inside the rope. Slide the threaded jacket back into place and tighten.

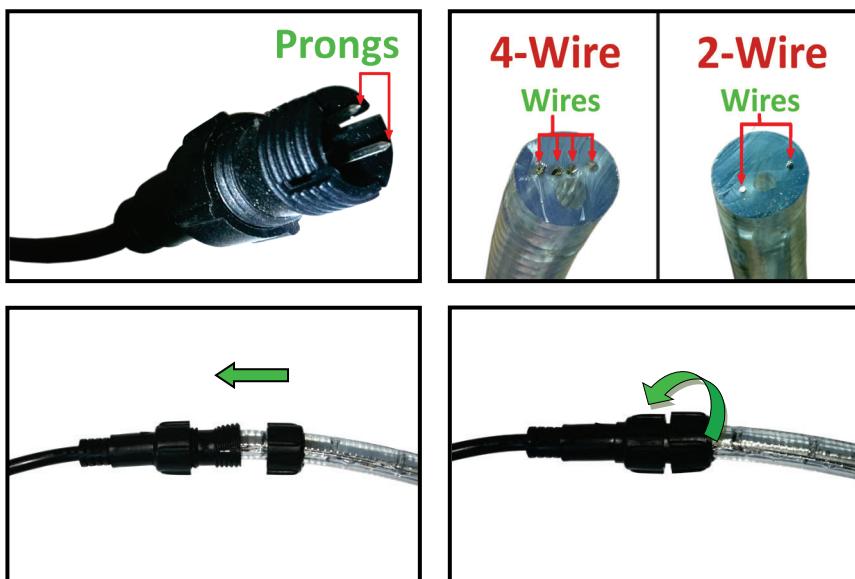


Important: For wet locations, use a white waterproof power cable instead, and waterproof as per the instructional section below.

Apply Inline Joiners

To connect two pieces of rope light, use a joiner.

Slide the threaded jackets on each section of rope light to be connected.

Push the sharp ends of the centered pins into the wires of one section of the rope light, then slide the threaded jacket into place and tighten. Then do the same for the other section of the rope light to join the two pieces together.

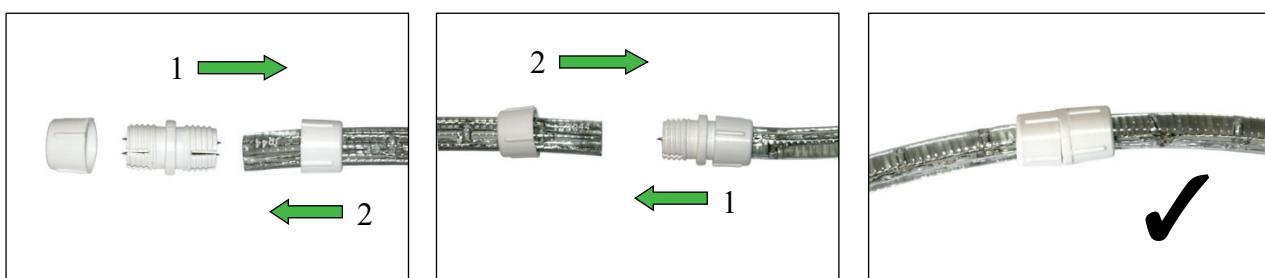


Important: For wet locations, seal the connection with silicone sealant.

Install Junction Connectors

'T' or 'X' or 'L' junctions allow you to join two sections of rope lighting to a third and/or fourth section of rope light using pin connectors.

Push the sharp pins of the pin connector into the wires of the rope light until it stops. Push the rope light all the way into a free socket on the junction making sure the pins are aligned with the holes in the socket. Repeat these steps for the other sides of the connector.

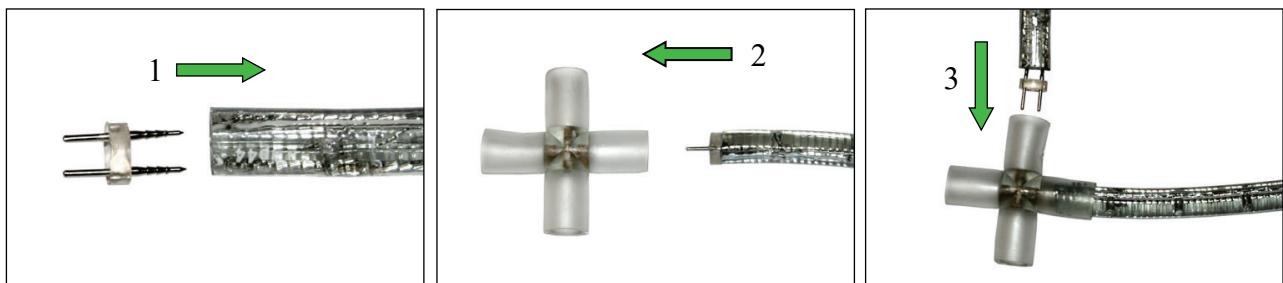


Important: For wet locations, seal the connection with silicone sealant.

Waterproofing Connections

You will need:

- Clear silicone sealant (we recommend Selleys Roof & Gutter)
- Heatshrink tubing ~24mm Diameter (any colour will do, but we recommend the black dual-wall tubing from Jaycar)
- Heat gun or hairdryer

1. Place the heatshrink tubing over the rope, ready to slide into place over the connection. You may need to do this before you connect the rope to the power cord, otherwise run it down the rope from the other end. Make sure the tube is long enough to cover the connection with a little to spare.
2. Then check that your connection of the power cord to the rope is working – it's very frustrating to get to the end and find out its not working!
3. Place the silicone around the join – both around the tightening threaded jackets and where the rope enters the connector.
4. Slide the heatshrink tubing into place over the connection – it should cover the entire connection, then apply heat to the tubing evenly all around – it will start to shrink down and encase the connection. Let it cool.
5. Let the connection sit for 24 hours before installation to let the silicone inside set and allow the connection to become robust.

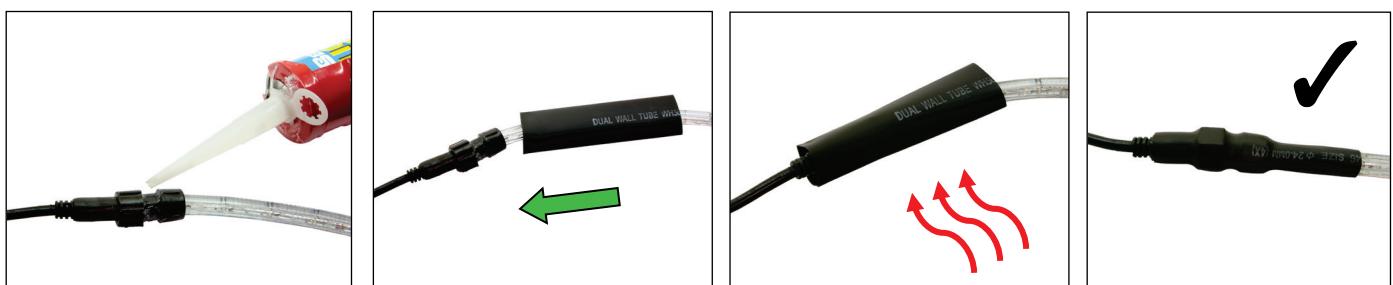

Important: It's a good idea to test if the rope is connected properly and working before waterproofing connections.